



Instruction Manual

www.micro-seiki.nl ms-db@micro-seiki.nl

Dustcover C-1000.

General.

This dustcover is an exact copy of the original Micro-Seiki C-1000 dustcover. All dimensions are exactly copied from the original. The only difference is the plate "MICRO C-1000". This plate is only on the original Micro-Seiki dustcover. Despite a packing-control of all parts, you are seriously suggested if all parts are present and show no damages.

Otherwise you should contact me immediately at: ms-db@micro-seiki.nl

Advise: for dry maintenance use only an abrasive cloth and for a wet maintenance use a barn free damp cloth. (use no cleaning products)

Contents of the packaging.


- 1 Manual,
- 1 front and 1 rear panel,
- 1 narrow top panel,
- 2 sides,
- 4 angles,
- 4 swivels,
- 2 hinges,
- 2 spacers,
- 28 rings,
- 2 long Allen-screws,
- 26 short Allen-screws,
- 4 rubber profiles,
- 1 lid.
 - **NB the Allen key (Number 3) on Photo 3 is not included.



Dustcap Micro C-1000 www.micro-seiki.nl page 2

Instructions.

- Care for a barn free big workspace,
- Remove the protective sheet from all parts,
- Screw the swivels in the angles,
- Mount the 2 hinges using 4 short Allen-screws and rings, (see Photo 2)
 - o Mount the entire container. (See Photo 4 to 9)
 - \circ To mount the narrow top panel it is best to loosen the back panel a little.
 - o To prevent damage, do not tighten the bolts too tight.
 - O Notice that the recess for the hinges are at the rear side. (Photo 8)
 - The 2 long Allen-screws are to be used at the top at the back, along with the narrow top panel and the spacers. (Photo 6, 7 en 8)
 - Paste two protective felts on top of the front angles. (Photo 4)
 - o Place the four rubber profiles. On top of frontpanel, left and right panel and one at front of the narrow top panel.

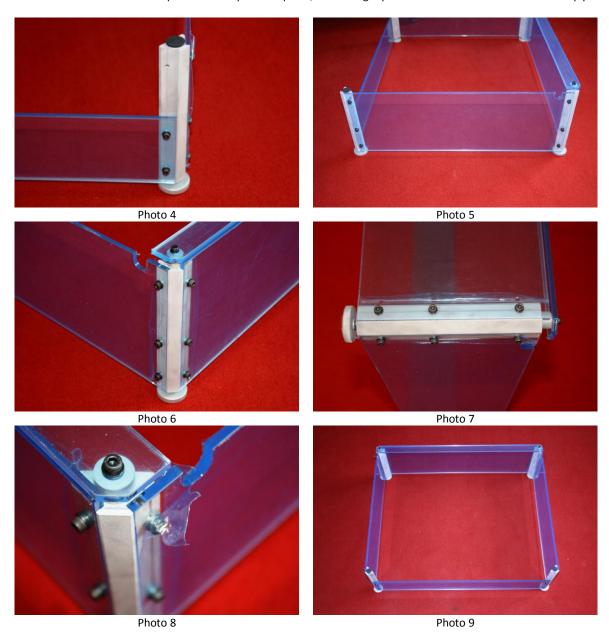

Dustcap Micro C-1000 www.micro-seiki.nl page 3